


Power Hookup Options

Customer Power Hookup Options for Plant Power Requirements – See Integrity Users Manual for full details. Your electrician simply changes the “Input Power Configuration Straps” and the entire 12-, 24- or 48-zone frame is re-wired! Factory Default is Option A.

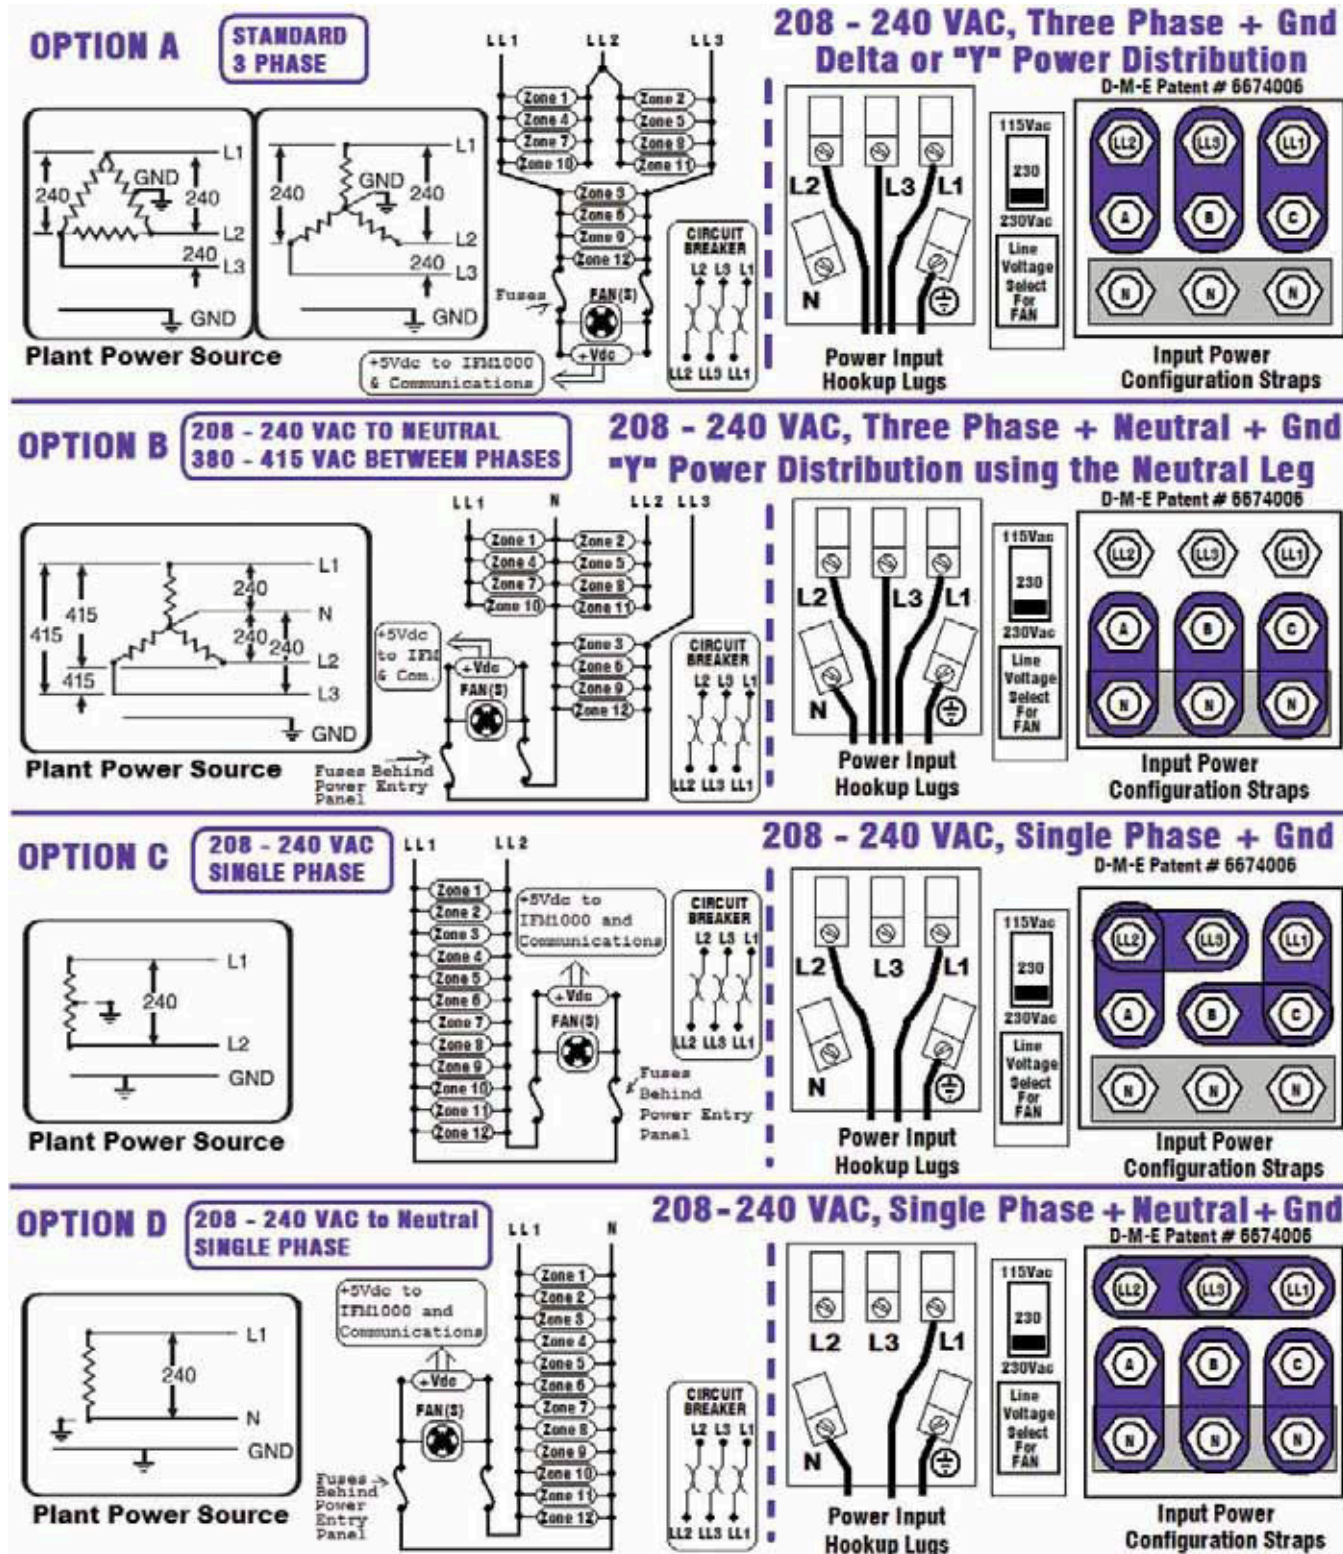

Integrity™ Hot Runner Controls | Power Hookup Options