



29111 Stephenson Hwy.
Madison Heights, MI 48071 USA
800-626-6653


REGISTER RINGS INSTALLATION

FOR: **Auto-fixed Integral Heater Micro Probes**
 Auto-fixed Integral Heated Probes
 Auto-fixed Probes

Refer to Mini-Print No.5.: 1400, 1500, 1600 & 1700

Please read carefully before installing components

MATERIAL: AISI H-13 Steel
HARDNESS: Rc 48-52

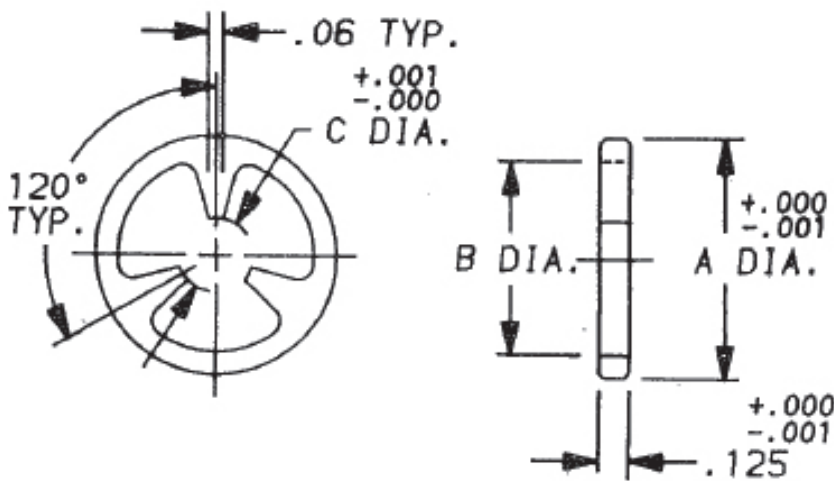


Catalog Number	A Dia.	B Dia	C Dia.	Used With
AFRR-03N	1.000	.812	.313	AFIP3 Series
AFRR-04N	1.062	.865	.387	AFIP4 Series
AFRR-05N	1.187	.937	.493	AFIP5 Series
AFRR-10N	1.375	1.000	.562	AFPN-310 thru 610
AFRR-20N	1.500	1.125	.693	AFPN-720 thru 1020



29111 Stephenson Hwy.
Madison Heights, MI 48071 USA
800-626-6653

REGISTER RINGS APPLICATION

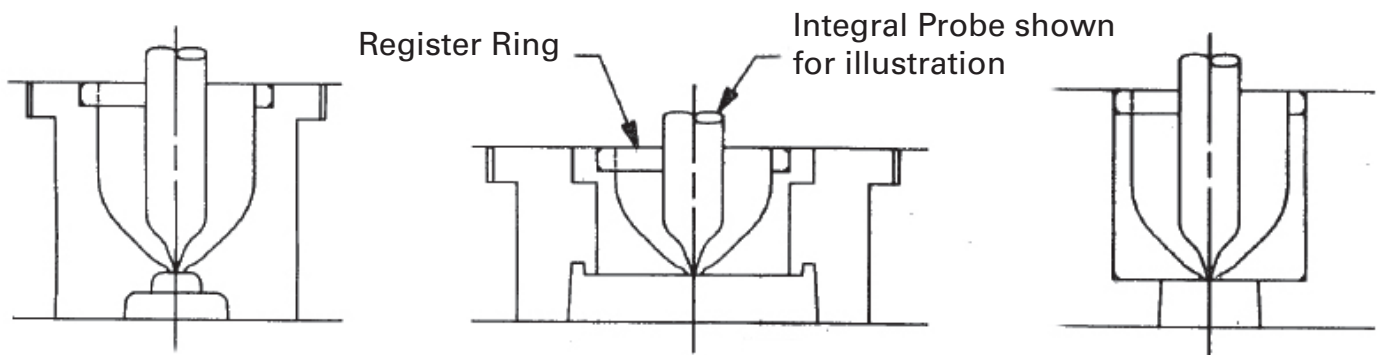

Always install register ring forward of the distributor block and as close to the front of the straight diameter of the probe as possible. This will register the probe tip to the gate diameter and minimize deflection.